

Cleaning to Prevent Errors



Cashless Ticket Printer Cleaning Card (2.56" x 6.113")

 
 
K2-TP256B25

This product is designed to remove built-up paper flash and contaminants from the thermal print head within a cashless printer. When inserted it will:

- Clean the thermal print head of contaminants
- Clean the platen roller

Use as:

- A scheduled maintenance product to prevent poor printing
- An emergency maintenance product to correct poorly printed tickets

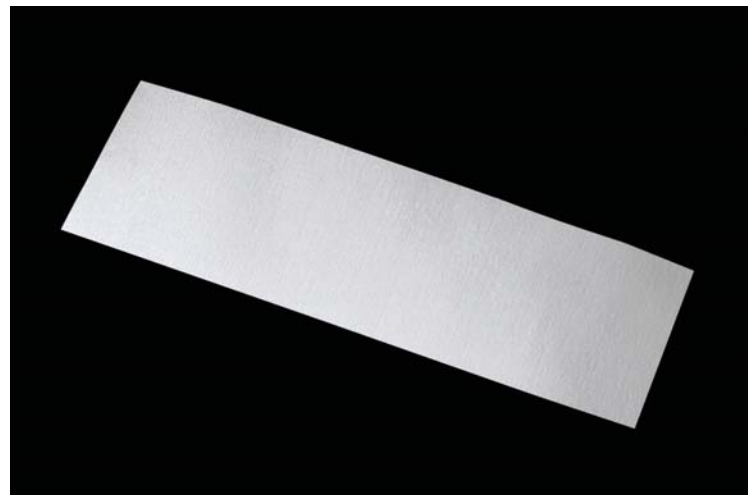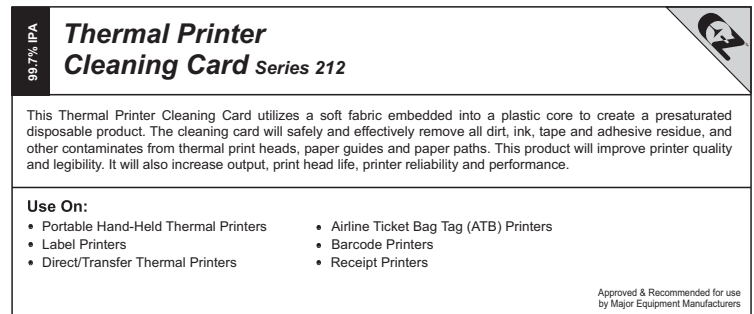

How Cleaning Cards Work

Transaction devices, such as card readers and thermal printers, need to be maintained for performance reliability. Cleaning cards safely and easily remove dirt and other contaminants from within these devices without costly outside assistance. Each transaction device requires specific cleaning products to be used as preventive or corrective maintenance.